### University of Nebraska - Lincoln Digital Commons@University of Nebraska - Lincoln

Other Publications in Wildlife Management

Wildlife Damage Management, Internet Center for

3-1-2005

# Two-chamber Rocket Box Bat House Plans

Merlin Tuttle Bat Conservation International

Mark Kiser Bat Conservation International

Selena Kiser Bat Conservation International

Follow this and additional works at: http://digitalcommons.unl.edu/icwdmother



Part of the Environmental Sciences Commons

Tuttle, Merlin; Kiser, Mark; and Kiser, Selena, "Two-chamber Rocket Box Bat House Plans" (2005). Other Publications in Wildlife Management. Paper 2.

http://digitalcommons.unl.edu/icwdmother/2

This Article is brought to you for free and open access by the Wildlife Damage Management, Internet Center for at DigitalCommons@University of Nebraska - Lincoln. It has been accepted for inclusion in Other Publications in Wildlife Management by an authorized administrator of DigitalCommons@University of Nebraska - Lincoln.

## Two-chamber Rocket Box

#### Materials (makes one house)

\* Western red cedar

or poplar preferred

**Outer shell** 

Outer roof

12" x 12" x ¾"

Inner roof

10" x 10" x 3/4"

Inner

shell

Pole.

2" diameter (23/8" outside diameter) steel pole, 20' long Two 1" x 4" (¾" x 3½" finished) x 8' boards\* Two 1" x 8" (¾" x 7¼" finished) x 8' boards\*


Two 1" x 10" (¾" x 9¼" finished) x 6' boards\* 24" x 24" x ¾" piece of AC exterior plywood Box of 100 exterior-grade screws, 15/8" Box of 100 exterior-grade screws, 11/4" 16 to 32 exterior-grade screws, 2"

20 to 30 roofing nails, %"

One quart water-based primer, exterior grade Two quarts flat, water-based stain or paint, exterior grade

Asphalt shingles or dark galvanized metal One tube paintable latex caulk

Two ¼" x 4½" carriage bolts, washers and nuts

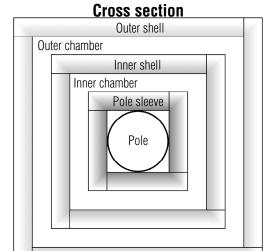

#### Recommended tools

Table saw or circular saw Caulk gun Hammer Tape measure Square Jigsaw, keyhole saw or router

Sandpaper or sander

Rasp or wood file

Variable-speed reversing drill 1½" hole saw or spade bit

1/8" and 1/4" drill bits Screwdriver bit for drill


Gnstruction

### Pole sleeve

#### 1. Measure, mark and cut out parts according to Figure 7. Dimensions must be exact for correct fit. Cut out two vent slots and four passage holes as shown.

- 2. Cut 1/6"-deep horizontal grooves ¼" to ½" apart on one side of all 36" and 45" boards and on both sides of all 42" boards. Sand to remove splinters.
- 3. Drill two 1/8" holes through each 3/4" x 11/2" x 4" spacer block to prevent splitting.
- 4. Assemble four pole sleeve boards into a hollow, square box as shown using 1%" screws and caulk. Pre-drill holes to prevent splitting. Countersinking holes may also help.

Inner shell

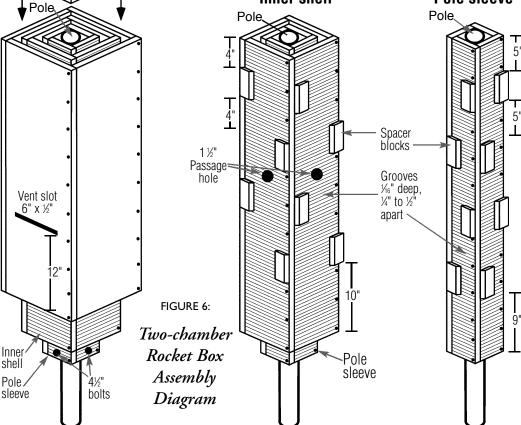

Pole sleeve


Inner shell


- 5. Attach spacer blocks to pole sleeve as shown (four per side) using two 1½" screws per block. Bottom spacer blocks are 9" up from bottom of pole sleeve. Top spacer blocks are 5" from top. Alternate spacer blocks on left and right sides, 5" apart.
- 6. Assemble four inner shell boards into a hollow, square box as in step 4.
- 7. Slide pole sleeve into inner shell until top edges are flush. Bat passage holes will be towards the top. Mark location of spacer blocks. Secureinner shell to pole sleeve with 2" screws through the spacer blocks to ensure no screws pro trude into roosting chambers. Pre-drill holes first to avoid splitting spacer blocks (countersinking holes may also help).
- 8. Attach spacer blocks (4 per side) to inner shell as shown, using two 1½" screws per block. Bottom spacer blocks are 10" up from the bottom edge of the inner shell. Top spacers are 4" from top. Alternate spacers left and right sides, 4" apart.
- Assemble four outer-shell boards into a hollow, square box as in step 4. Vent slots are on opposing sides and oriented towards the bottom.
- 10. Slide finished outer shell over inner shell, so that 6" of inner shell pro t rudes below outer shell. Mark locations of spacer blocks. Secure outer shell to inner shell as in step 7 (pre-drill holes first). Ensure that no screws pro trude into the roosting chambers.
- 11. Caulking first, attach inner roof to box with 1¼" screws. C a refully drive screws into top edges of shells to prevent screws from entering roosting chambers.
- 12. Center and attach outer roof to inner roof with 1½" screws, caulking first.
- 13. Paint or stain exterior three times (use primer for first coat). Cover roof with shingles or dark galvanized metal.
- 14. Slide completed rocket box over pole. One inch up from the bottom edge of pole sleeve, drill a ¼" hole all the way through pole and sleeve. Rotate box and pole 90° and drill another ¼" hole, 2 inches from the bottom, through pole and sleeve. Secure box to pole with two 4½" bolts, washers and nuts. Orient went slots north and south during installation.

# Optional modifications to the rocket box

- 1. For extra mounting height, insert a 4½" bolt and nut about halfway up through pole sleeve after completing step 5.
- 2. For extra heat-holding capacity, create a compartment in upper half of pole sleeve with a 2½"-square piece of leftover plywood. Fill upper half of sleeve with sand, gravel or dirt, and seal with another piece of plywood flush with top.
- In warmer climates, a larger outer roof with more overhang can be used for additional shading.

### 2' x 2' x ¾" AC plywood

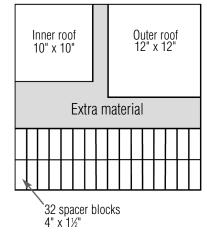

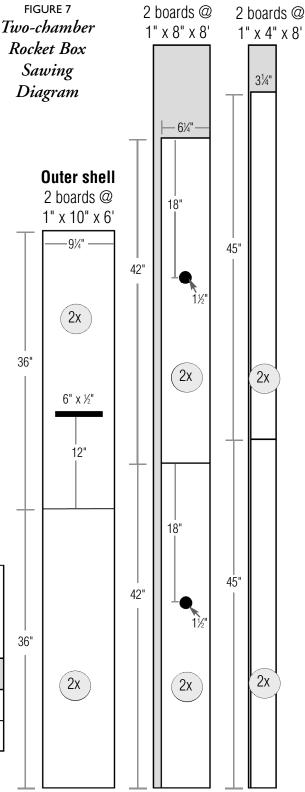

Two of each piece required